

Snazzi* Video Maker Cleaning Utility

Use the Snazzi* VideoMaker Cleaning utility to remove all the traces of the Snazzi* VideoMaker software installed previously prior to installing the new version. i.e. Snazzi* MS VideoMaker 1.4.21.

Steps to follow:

- 1- Uninstall Snazzi* MS VideoMaker software installed previously.
- 2- Uninstall the Device Drivers from the Device Manager.
- 3- Unplug the Snazzi* VideoMaker device from your system.
- 4- Run the EXE file named "MSVClean.exe".
- 5- Let the application run for a minute.
- 6- Then restart your system.
- 7- When the system will boot, your Snazzi* VideoMaker device would be detected and "New Hardware Found Wizard" will popup.
- 8- Browse for the location of device drivers (For example: C:\Windows\Desktop\Snazzi* MS VideoMaker1.4.21\Drivers)and install the device drivers.

Support:

For any further assistance, please email V One Multimedia Tech Support at support@vonemm.com.